GRAIN MOISTURE METER



TK25G

All right reserved 2011

Thanks for choosing our moisture meters!

For your easy to master this instrument as soon as possible, please read following instructions carefully and always keep this meter within easy reach. The Grain Moisture Meter TK25G is used for fast and accurate measurement of moisture in the process of allotment, acquisition, storage, machining of packed grains, Barley, Corn, Hay, Oats, Rapeseed, Rough Rice, Sorghum, Soybeans and Wheat.


2.Specification

Display:4 digital LCD Measuring range :6-30% Temperature:0-60°C Humidity:5%-90%RH Resolution:0.1 Accuracy: ±0.5%n **Operation: Electrical Resistance** Method, Automatic temperature Compensation Power supply: 4x1.5 AAA size (UM-4) battery Dimensions: 460×75×35mm 18.3x3x1.4 inch Weight: 203g (not including batteries) Guarantee:1 year

1.Features:

- 1.1.It is portable, compact, easy to use and the moisture measurement readings are instant.
- 1.2.Digital display with back light gives exact and clearly reading although you stay at the somber conditions.
- 1.3.It will save time and expense by monitoring dryness and helps to prevent deterioration & decay caused by moisture whilst in storage, therefore processing will be more convenient and efficient.
- 1.4.The moisture meter operates by electrical

3.Panel descriptions

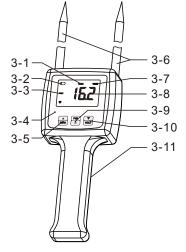

3-1 RH% symbol
3-2 low battery
3-3 max symbol
3-4 warning light
3-5 zero/inc key
3-6 pin probe
3-7 material symbol
3-8 testing value

resistance and has automatic temperature compensation.

- 1.5.Measurements are taken by inserting the sensors into the bale of grains.
- 1.6.Manual off at any time .Auto power off after 5 minutes from last operation.

3-9 power/function 3-10 hold/dec key key 3-11 battery cover

4. Operation procedure

- 4.1 Turn on the power key 3-9,the symbol "0" will be showed on display. It will need zeroing if showed other value, please depress ZERO key 3-5 while the probe sensor without touch anything, or zeroing is not efficient. make zeroing can decrease the effect from the temperature and humidity in the air.
- 4.2 Hold the instrument with your hand, insert the probes

into the materials straightly .The probes are more deeper, the value is better.

- 4.3 Depress Hold key 3-10,the symbol "max"will be showed on display, then the max value must be stored on display when measuring. Depress the key 3-10 again, this function will be canceled.
- 4.4 Choose the suitable code for different grain. Depress the key 3-9 and not release until the "CDXX" showed on display, then press 3-5 or 3-10 key to choose your

needed code. Please refer to the table in 8.0

5.Warning setting

- 5.1 Depressing key 3-9 and don't release until "AL2" showed on display(it will takes 5 seconds to complete operation),then press key 3-5 or 3-10 to choose your suitable value according to your need, press key 3-10 again back to the operation state.
- 5.2 Setting the "AL1" just the same ways as "AL2".
- 5.3 Usually ,"AL2"must larger than "AL1",if the "AL2" less than "AL1" during setting

process, then the instrument will be returned back the factory setting, just to say,AL1=13,AL2=18.

6.Replace batteries

When battery symbol showed on display, it must replace the batteries in time. Slide the batteries cover ,put the batteries into the hole correctly.

7.Notes:

Please take out the batteries if the instruments without use for a long time.

Put the probe in the air without touch anything when zeroing, or the zeroing is not efficient.

8.	cod	de t	abl	е
				-

GRAIN			
Wheat/Rye			
Maize/Corn			
Soya Beans			
Paddy			
Rice			
Barley/Oats			
Sorghum/Milo			
Buckwheat			
Peas			
Oilseed Rape			
Mustard Seed			

CODE	GRAIN
Cd12	Sunflower seed
Cd13	Sugarbeet Seed
Cd14	Coffee
Cd15	Coffee Green
Cd16	Cocoa Beans
Cd17	Linseed
Cd18	Lentils
Cd19	Ground nuts Hulled
Cd20	Grass Seed/Rye grass
Cd21	Grass Seed/Cocksfoot
Cd22	Clover/White Seed

CODE	GRAIN
Cd23	Clover/Red Lucerne Seed
Cd24	Brassicas/ Brussels Sprout, Cabbage seed
Cd25	Beans/Tic /Winter